 


XGIMI ElFin

USER GUIDE

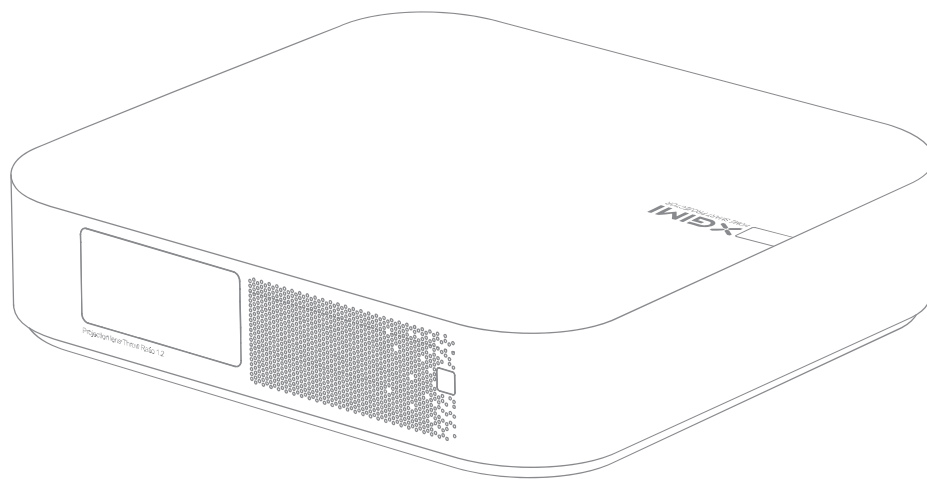

English	1
Deutsch	14
Español	27
Français	40
Italiano	53
Polskie	66
Português	79
Русский	92
日本語	105
繁体中文	118
한국어	131
اللغة العربية	144

Please read the Product Instructions carefully before using the product

Thank you for purchasing and using the products of Chengdu XGIMI Technology Co., Ltd. (hereinafter referred to as "XGIMI Technology" or "XGIMI"). You should read the Product Instructions carefully before using this product for both your safety and interests.

XGIMI Technology disclaims all responsibilities for any personal injury, damage to property, or other loss that may occur as a result of improper or unsafe use of this product.

About the Product Instructions (hereinafter referred to as the "Instructions")

The copyright of the Instructions belongs to XGIMI Technology.

Trademarks and names mentioned in the Instructions belong to their respective right owners.

In case of inconformity between the content of the Instructions and the actual product, the actual product shall prevail.

Any objections to any content or clause found within the Instructions should be reported to XGIMI Technology in written form within 7 days after the purchase otherwise, it will be assumed that you agree to, understand, and accept all the content of the Instructions.

Google, Android TV and Chromecast built-in are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.



HDMI High-Definition Multimedia interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS DTS-HD, DTS Studio Sound, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

* Model: XL03A

* XGIMI Technology reserves the right to interpret and amend the Instructions.

 
Overview

1. Front View


① Auto Focus ToF Part

② Auto Keystone

Note: Do not block the sensor to prevent keystone correction failures.

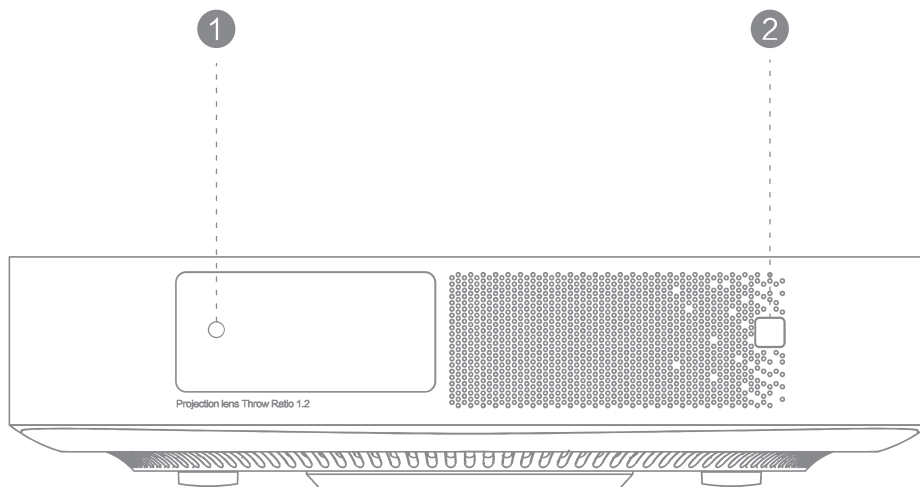


 2.Button&input View

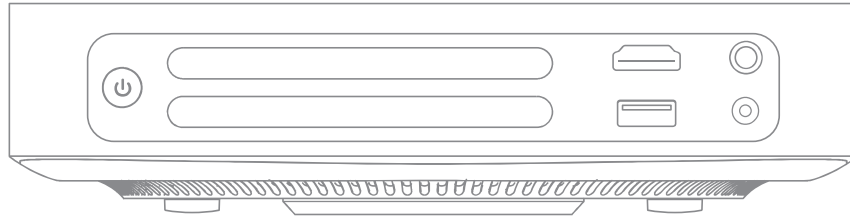


USB Output: 5VDC, 0.5A

 3.Bottom View

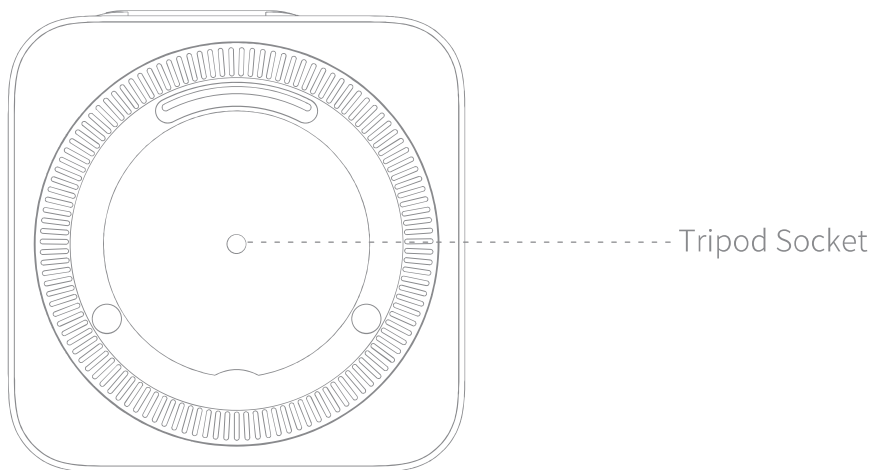

 4.Remote View

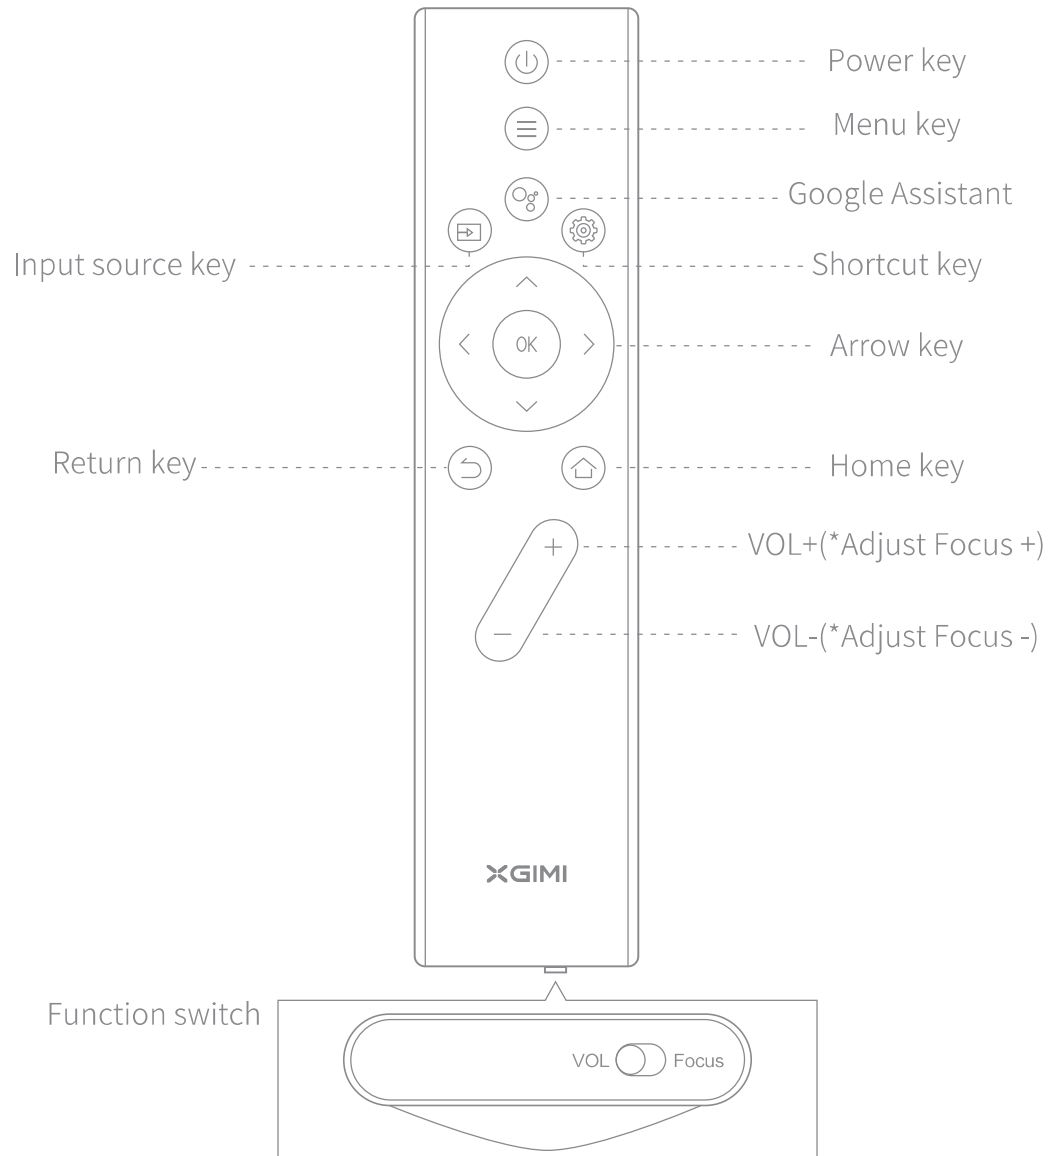


* Volume is adjusted add-subtract key when function switch is moved to the left (VOL).

* Focus is adjusted through add-subtract key when function switch is moved to the right (Focus).


Getting Started

 1 Device on/off

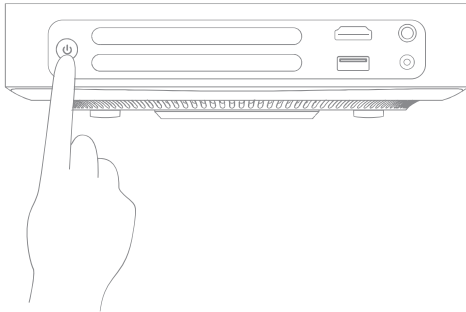

Connect to the power source, and press the " ⏻ " button to turn on the device. When the device is on, press the " ⏻ " button to turn off the device.

 2 Remote Control Pairing

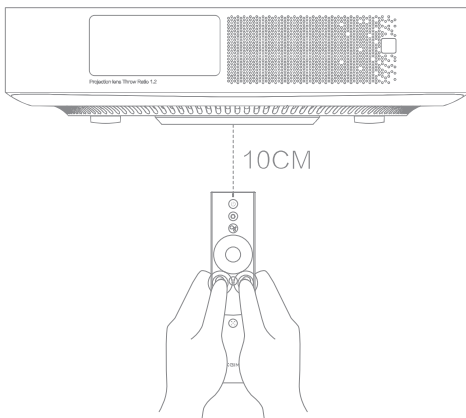

- Place the remote control within 10cm of the device, press " ⏪ " and " ⏴ " simultaneously, an indicator light will begin flashing as the remote control enters pairing mode. Buttons can be released as soon as flashing begins, and the connection is successful when a "Ding" is heard.

- If pairing fails, after 30s repeat the above steps.

3 Function Description of Remote Control

• Focus adjustment

When the function switch at the bottom of the remote control is moved to the right (Focus), the automatic focus function is enabled. You can adjust the focus by using the " VOL+/- " button. When the function switch is moved to the left (VOL), focus adjustment is disabled. You can use the " VOL+/- " button to control the device volume.

• Shortcut key

 
To access the shortcut key function, briefly press the Settings button " ⚙️ "

4 Automatic Focus Adjustment/Remote Focus Adjustment


- When the automatic focus adjustment function is enabled, the frame will be adjusted automatically when you turn on the device or move it to another location.
- You can enable automatic focus by using the switch at the bottom of the remote control. Move the switch to the right (Focus) so that the "VOL+/-" button can be used to adjust the frame.


5 Automatic keystone correction

- When the automatic keystone correction function is enabled, the frame will be adjusted automatically if you move the device to another location.

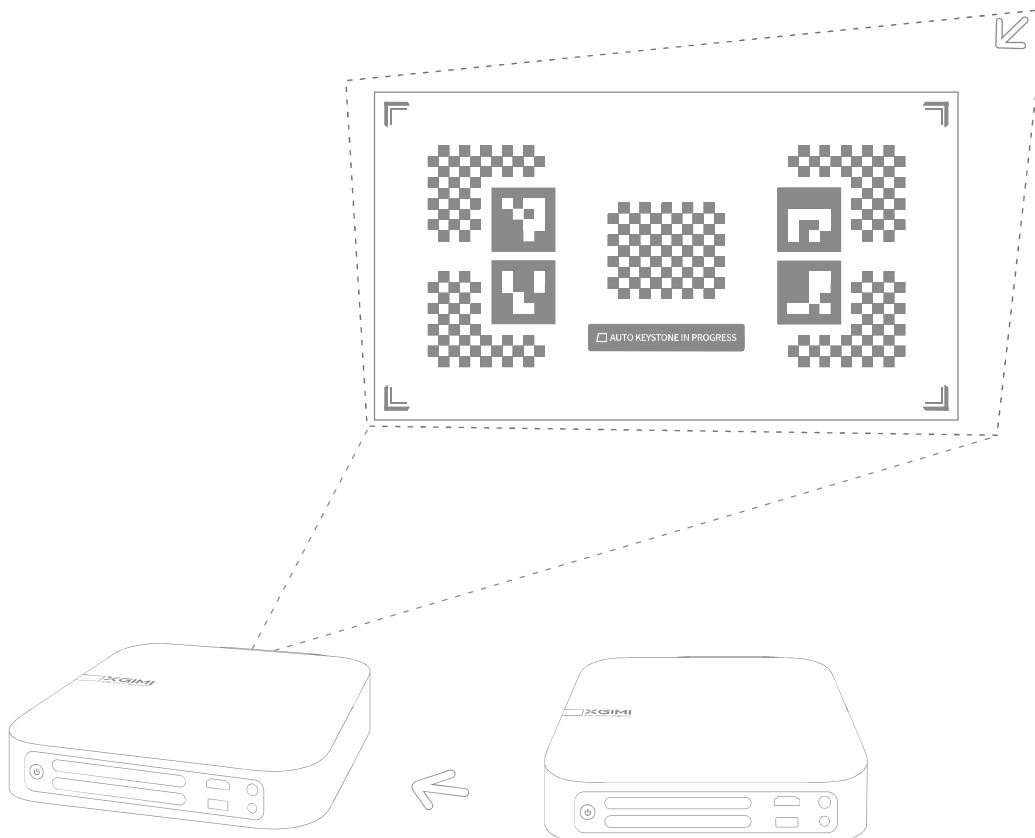

 - When the automatic obstacle avoidance function is enabled, the frame will automatically avoid obstacles if there are obstacles in the projection area. When the automatic screen alignment function is enabled, the frame will automatically match the screen if there is a 16:9 or 16:10 screen in the projection area.

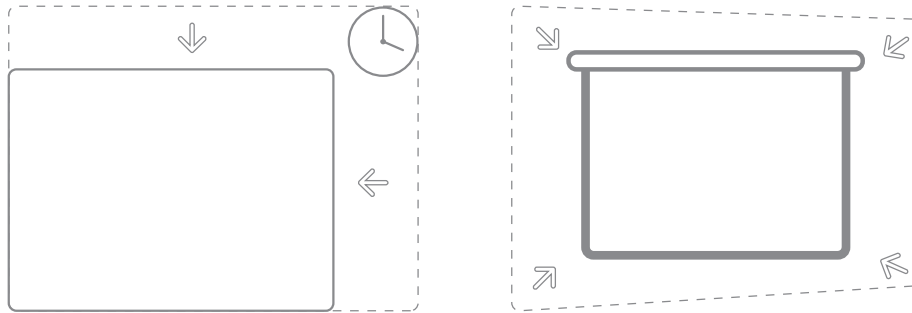

- Press the  button on the remote control to enter the "Keystone Correction" page. Select "Auto Keystone Correction" to enable the automatic keystone correction function. Select "Manual Keystone Correction" to adjust the four points and the size of the frame.

6 Google Assistant

- Talk to Google to control your TV using your voice. Press the Google Assistant button on your remote to search for movies and shows, get recommendations to match your mood, get answers, control smart home devices, and more.

7 Bluetooth Speaker


- Use mobile Bluetooth settings to search for "XGIMI Elfin" to pair with the device and play songs.

8 Chromecast Built-in™



- Easily cast your favorite movies, music, and more to your TV with Chromecast built-in.
- Simply tap the Cast button from apps you already know and love to stream entertainment from your phone, tablet or laptop to the TV. While you're streaming, you can keep using your phone for other things- scroll through social media, send a text, and even accept calls.

9 More Settings

- Set your device and image at any interface by using the Settings button "  " on the remote control.
- The various settings are described as follows.

Brightness and color	Select a brightness mode and adjust the parameters.
Image mode	Select different image modes in different scenarios, such as movie, football, office and game, to adjust the image parameters of video or signal source. The low-latency option is available in game mode.
Sound effect	Adjusts the frame ratio of a signal source.
Focus Calibration	If the auto focus function is not as good as before after long-term use, you can tune the automatic focus adjustment function through "Focus Calibration". Note: Follow instructions on the screen.
Keystone Calibration	If you are not satisfied with the effect of the automatic keystone correction function, you can recalibrate the automatic keystone correction function through "Keystone Calibration". Note: Follow instructions on the screen.
Gyro Calibration	If the automatic keystone correction function is not as good as before after long-term use, you can recalibrate the gyro through "Gyro Calibration" to optimize the effect of automatic keystone correction. Follow instructions on the screen.

10 Charging Instruction


- The device should be charged with an official, standardized adaptor.

11 System Upgrade

- The system can be upgraded only when the device has at least 50% battery power or is connected to a power source.

- Online upgrade

The online upgrade can be performed through system settings.

Note: The online upgrade can be made through system settings "  "

Important Precautions

Correct use of the device:

- Do not face lens into eyes because the strong projector light may cause injury to the eyes.
- Do not block the air inlet/outlet of the device in order to avoid damage to internal electronic devices arising from normal heat dissipation failure of the device.
- Do not wipe the lens directly with cleaning tools including paper and cloth in order to avoid damage to the lens. Please clean up the dust on the lens surface through clean air blowing.
- Do not wash the device with chemicals, detergents, or any liquid in order to prevent the circuit board from being corroded by rainwater, moisture, and mineral-containing liquids.
- Keep the device and its components and accessories out of reach of children.
- Make sure that the device is used in a dry and ventilated environment.
- Do not store the device in overheated or overcooled places, because extreme temperatures will shorten the life of electronic devices. Place and use the device in an environment of 0°C-40°C.
- Do not put the device into any heating equipment (such as dryer and microwave oven) for drying.
- Do not firmly extrude the device or place barriers on it or its back to avoid damage to the device.
- Do not throw, strike, or sharply vibrate the device to avoid damage to the internal circuit board.
- Do not try to disassemble and assemble the device yourself. If any issue occurs, please contact the after-sales service of XGIMI.
- Do not repair any product on your own. If the device or any component cannot work properly, consult the after-sales service of XGIMI in a timely manner or return it to the factory for repair.
- Use careful with the earphone maybe excessive sound pressure from earphones and headphones can cause hearing loss.
- As with any bright source, do not stare into the direct beam, RG2 IEC 62471-5:2015.



RG2