

ATR4650-USB

FCC Notice

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contact:

Responsible Company: Audio-Technica U.S., Inc.
Address: 1221 Commerce Drive, Stow, Ohio 44224, USA
Tel: 330-686-2600

ICES statement
CAN ICES-3(B)/NMB-3(B)

- * The included USB-C to USB-A adapter is intended for use with this Audio-Technica product only.
- * L'adaptateur USB-C - USB-A inclus est conçu pour être utilisé uniquement avec ce produit Audio-Technica.
- * El adaptador USB-C a USB-A incluido está diseñado exclusivamente para uso con este producto de Audio-Technica.
- * O adaptador USB-C para USB-A incluido deve ser usado adaptador com este produto da Audio-Technica.

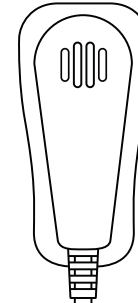

ATR4650-USB

Digital Surface-Mount/Clip-On Microphone
Microphone Numérique à Clipser/Monter en Surface
Micrófono de Montaje en Superficie/Pinza Digital
Microfone Digital de Lapela/Montagem em Superfície

Quick Start Guide
Guide de Démarrage Rapide
Guía de Inicio Rápido
Guia de Início Rápido



audio-technica


Audio-Technica Corporation (Headquarters)
2-46-1 Nishi-naruse, Machida, Tokyo, 194-8666, Japan

Audio-Technica U.S., Inc.
1221 Commerce Drive, Stow, Ohio, 44224, USA

www.audio-technica.com
© 2021 Audio-Technica Corporation P52827-02

audio-technica

ATR4650-USB

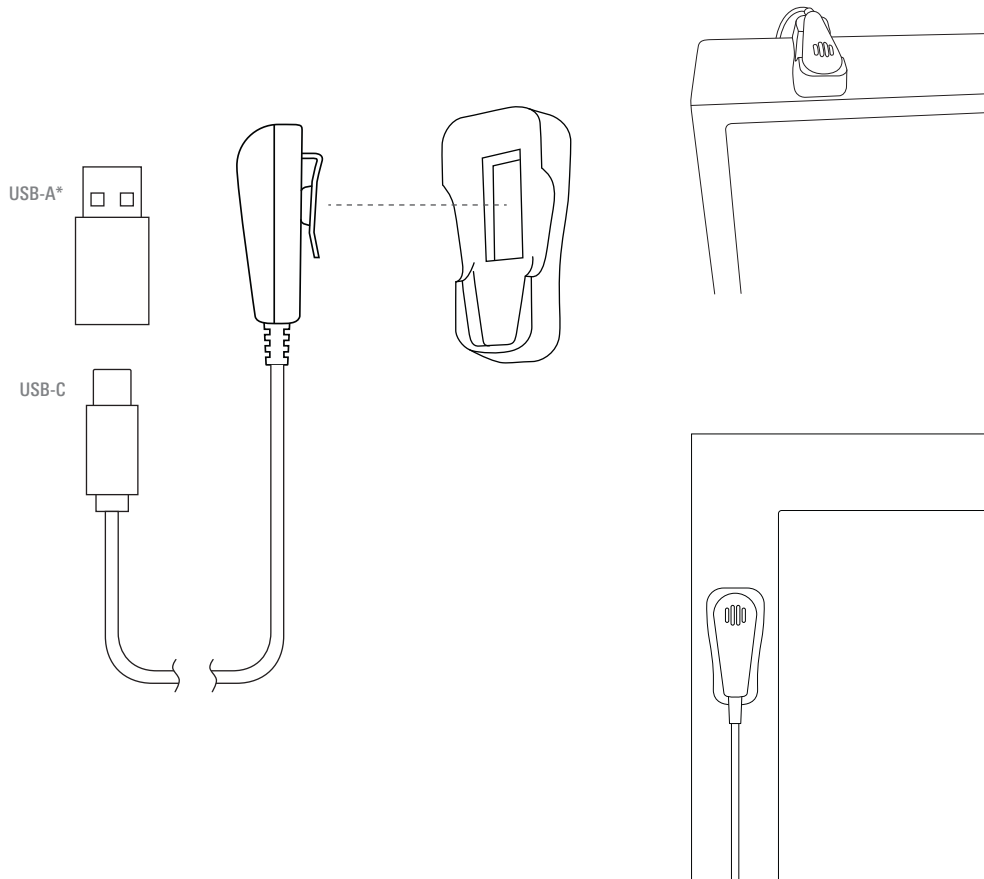

English

1 Choose Configuration – Clip-On or Surface Mount

A Clip-on

Use clip on back of microphone to secure mic to lapel or other article of clothing. Attach microphone about 6" below the user's chin, making sure that it won't rub against or become covered by a piece of clothing.

B Surface Mount

Determine what surface you wish to mount the microphone to (computer monitor frame or other suitable surface).

Remove backing on the mount's adhesive pad and adhere mount in position (*do not mount to monitor screen*).

- 2 Plug the cable's USB-C connector (or USB-A adapter*) into your computer, tablet or smartphone.

When using with equipment that includes a built-in mic, consult that device's user guide for instructions on disabling its mic.

Français

- 1 **Choisissez la configuration** : à clipser ou montage en surface

A À clipser

Utilisez la pince à l'arrière du microphone pour fixer le microphone sur le revers ou tout autre vêtement. Placez le microphone à environ 15 cm du menton de l'utilisateur, en vous assurant que le micro ne risque pas de toucher le vêtement ou d'être recouvert.

B Montage en surface

Déterminez la surface sur laquelle installer le microphone (cadre de moniteur de l'ordinateur ou autre surface adaptée).

Retirez le dos du patin adhésif du support et collez-le dans la position souhaitée (ne le placez pas sur l'écran du moniteur).

- 2 Branchez le connecteur USB-C du câble (ou l'adaptateur USB-A*) à votre ordinateur, tablette ou smartphone.

Lors de l'utilisation d'un équipement avec micro intégré, consultez le guide d'utilisation de cet appareil pour les instructions relatives à la désactivation de son micro.

Español

- 1 **Elija la configuración**: de montaje en superficie o de pinza

A Pinza

Utilice la pinza para ropa situada en la parte trasera del micrófono para fijar el micrófono a la solapa u otra prenda de vestir. Sitúe el micrófono a unos 15 cm debajo de la barbilla del usuario, asegurándose de que no roza ni queda cubierto por ninguna prenda de vestir.

B Montaje en superficie

Decida la superficie en la que desea montar el micrófono (marco del monitor de la computadora u otra superficie adecuada).

Retire la cubierta de la cinta adhesiva del soporte y pegue el soporte en la posición elegida (no lo monte en la pantalla).

- 2 Enchufe el conector USB-C del cable (o el adaptador USB-A*) en la computadora, tablet o smartphone.

Si se utiliza con un equipo con un micro incorporado, consulte el manual de usuario del dispositivo para obtener instrucciones sobre cómo desactivarlo.

Português

- 1 **Escolha a configuração** – lapela ou montagem em superfície

A Lapela

Use a garra na traseira do microfone para prender o microfone a uma lapela ou outra peça de roupa. Prenda o microfone cerca de 6 pol. abaixo do queixo do usuário, certificando-se de que o microfone não fique raspando na roupa ou seja coberto por ela.

B Montagem em superfície

Determine em qual superfície deseja montar o microfone (estrutura do monitor do computador ou

outra superfície adequada).

Remova a película traseira da almofada adesiva do suporte e cole o suporte na posição (não cole na tela do monitor).

- 2 Conecte o conector USB-C do cabo (ou adaptador USB-A*) no seu computador, tablet ou smartphone.

Ao usar com equipamento que inclui um microfone embutido, consulte o guia do usuário desse dispositivo para obter instruções de como desativar seu microfone.