 


PWR04

Portable waterproof speaker

OPERATING MANUAL

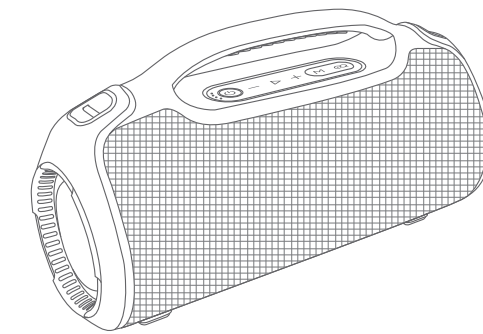

Thank you for buying our ArtSound PWR04 speaker. We hope you'll enjoy it for years to come. Please read these instructions carefully and keep this manual for later reference.



 
WHAT'S IN YOUR BOX

- 1 Portable speaker
- 1 Type-C charging cable
- 1 User manual

SAFETY INSTRUCTION

1. Use this device in temperate climates only.
2. This device may be used by children aged 8 years or older any by those with reduced physical, sensory or mental abilities, or those lacking experience or knowledge, provided they are correctly supervised, or if the instructions related to the use of the device have been adequately given and if the risks involved have been understood. Children must not play with this device. Children should not clean or maintain the device without supervision.
3. The electrical socket must remain easily accessible if it serves as the means of disconnection.
4. Always unplug the device before cleaning it.
5. Clean the device with a soft dry cloth only. Never use solvents.
6. Attention should be drawn to the environmental aspects of battery disposal.
7. The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

PRODUCT DIAGRAM

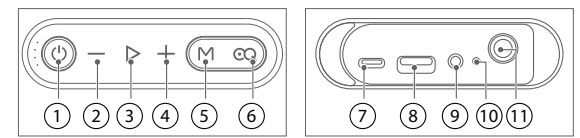

- | | |
|--|---|
| | 1. Press and hold the power button for 2 seconds: Power on/off / BT disconnect
Short press to switch between the LED light modes |
| | 2. Short press: volume down
Press and hold for 2 seconds: previous track |
| | 3. Pause/Play/Clear paired devices |
| | 4. Short press: volume up
Press and hold for 2 seconds: next track |
| | 5. Mode switch/TWS connect/MIC power button |
| | 6. EQ switch/ECHO/MIC volume/Guitar |
| | 7. USB-C input/output jack |
| | 8. USB-A jack (USB playback) |
| | 9. 3.5mm Aux-in jack |
| | 10. Reset |
| | 11. 6.5mm MIC jack |

 
OPERATION GUIDE

1. POWER ON/OFF

Press and hold the “” button for 2 seconds to power on, press and hold again to power off.


2. BT MODE

The PWR04 will automatically enter BT mode after powering on, and the blue led indicator will start flashing.
Turn on Bluetooth on your device to search for “PWR04” and connect to it, a voice prompt can be heard after successful connection. The blue led indicator stays on, and you can enjoy your music.
Press twice the “” button to disconnect BT.
Press and hold the “” button for 3 seconds to remove the BT pairing info.
Short press the “” button to switch modes (BT-USB playback-Aux-in).

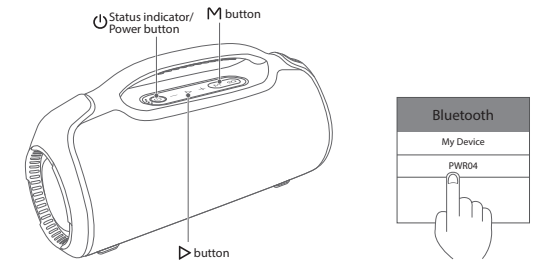


3. TWS CONNECTION

 Press the “” button twice on both speakers, a voice prompt will be heard on successful connection (do not connect with your mobile device before that).
The led indicator on the second speaker stays on, and on the master speaker it starts flashing. Follow up step 2 (above) to connect your mobile device to enjoy your music.

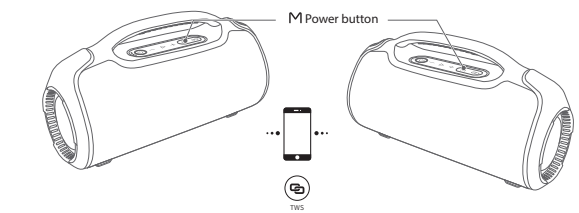


4. EQ SWITCH

 Short press the “” button to switch between standard mode/bass mode/outdoor mode circularly.

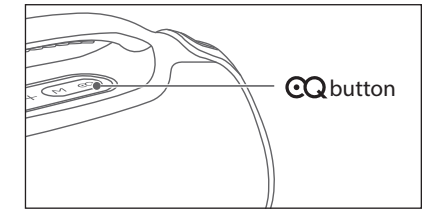


5. PLAY CONTROL

 - Short press the “” button to turn down the volume; short press the “” button to turn up the volume. A beep can be heard when reaching maximum volume.
- In BT/USB playback mode, press and hold the “” button for 2 seconds to go to the track ; press and hold the “” button for 2 seconds to go to the previous track.
- In BT/USB playback mode, short press the “” button to pause the music, press again to resume the music; In Aux mode, short press the “” button to mute the sound, press again to unmute.

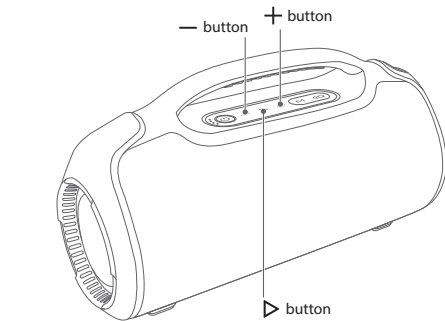

6. MICROPHONE / GUITAR

 - You can connect a wired microphone to the MIC jack on the back of the PWR04, it can be used automatically.
- You can connect a guitar to the MIC jack on the back of the PWR04, then press twice the “EQ” button to switch guitar mode.
- MIC volume/ECHO adjustment: press and hold the “EQ” button for 5 seconds (orange led indicator starts flashing), then short press the “+” button to turn up the amount of ECHO, short press the “—” button to turn down the amount of ECHO; Press and hold the “EQ” button again for 5 seconds (green led indicator starts flashing), then short press the “+” button to turn up the microphone volume, short press the “—” button to turn down the microphone volume.
- Guitar volume adjustment: press and hold the “EQ” button for 5 seconds (green led indicator starts flashing), then short press the “+” button to turn up the guitar volume, short press the “—” button to turn down the guitar volume.

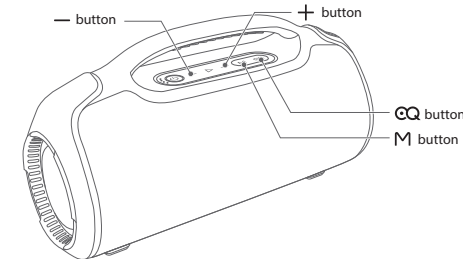

7. AUX/USB PLAYBACK

The PWR04 will switch automatically to Aux-in mode when a cable is plugged in. Plug in a USB flash drive with MP3 songs, and the PWR04 will automatically switch to USB playback mode.

8. LIGHT MODES

Short press the “⏻” button to switch between the LED light modes.

 
9. BATTERY SAVING

The PWR04 will power off automatically to save battery when there is no device connected for 10 minutes. Press and hold the “⏻” button for 2 seconds to power on.


10. CHARGING/POWER SUPPLY

Important notice:

- Don't use a power adapter with no safety certificate.
 - We suggest using an adapter with 5V/2A to charge.
- Please charge the PWR04 as soon as possible when you hear the low battery voice prompt.
 - The battery level indicator starts flashing while charging (battery level 25% / 50% / 75% / 100%) and it stays on when fully charged.

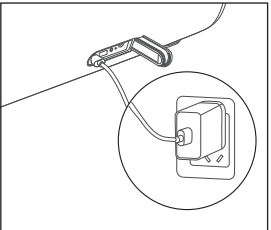

FUNCTION ILLUSTRATION

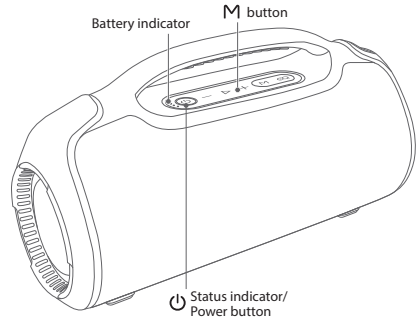 


Battery indicator.	White indicator for battery
Status indicator.	Blue indicator for BT, green indicator for Aux, orange indicator for USB flash drive
EQ indicator	White indicator for EQ, orange indicator for ECHO, green indicator for MIC/Guitar volume
Charging indicator.	The battery indicator starts flashing while charging; battery indicator stays on when the charging is finished.
Low battery.	The battery indicator starts flashing when the battery is low.


TECHNICAL SPECIFICATIONS

system	2-way bluetooth speaker
range	<150 m ²
woofer	2 x 50W
tweeter	2 x 10W
power amplifier RMS	120W
sensitivity	90dB
sources	stereo bluetooth (TWS)
input	USB (charging), 5-20V / 2.1A
	AUX - 3.5 mm jack
functions	powerbank (USB-C)
lighting	LED
wireless	bluetooth 5.3 (<15 m)
battery	Li-Ion 11.1V/4500 mAh
charging time	2 h
playtime	8 - 10 h (50% volume)
power supply	USB-C (5-20V 2.1A)
weight	5.2 kg
composition	ABS plastic
colour	black
dim. (hxbxd)	65 x 192 x 254mm
waterproof	IPX6

WARRANTY CONDITIONS

2 year warranty from date of purchase. The warranty is limited to the repair or replacement of the defective material insofar as this defect is a result of normal use and the device has not been damaged. Artsound is not responsible for any other costs that ensue as a result of the defect (e.g. transport). For details, please consult our general terms and conditions of sale.

 This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

 I, House Of Music NV, hereby declare that the type of radio equipment ARTSOUND complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity can be found at the following internet address: <http://www.artsound.be> > Support.

Disclaimer: All trademarks are the property of their respective owners. All specifications and information are subject to change without further notice. Slight variations and differences might appear between printed photos and actual product due to product enhancement. House Of Music NV - Legen Heirweg 23D, B-9890 Gavere

artsound
we speak sound

House of Music nv, Legen Heirweg 23D, B-9890 Gavere

 www.artsound.be  [artsoundaudio](https://www.instagram.com/artsoundaudio)  [artsound.audio](https://www.facebook.com/artsound.audio)